

smart®

i 8813

 
User Manual

---

English

---

PRIMÉ

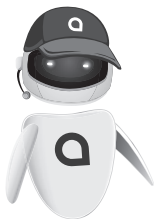

smart® SERVICE CENTER

Thank You for Purchasing this Smart mobile device. This device will provide you with high quality mobile communication and entertainment based on SMART and high standards.

- Content in this manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice.
- The items supplied with your device and available accessories may vary depending on your region or service provider.
- You can purchase additination accessories from your local Smart dealer.
- The supplied accessories perform best for your device.
- Accessories other than the supplied ones may not be compatible with your device.

## **Copyright**

copyright © SMART

This manual is protected international copyright laws. No part of this manual maybe reproduced, distributed, translated, or transmitted in any from or by any means, electronic or mechanical, including photocopying, recording, or storing in any information storage and retrieval system, without the prior written permission of SMART.

## Contents

 
Get Started	4
Keys and Parts	5
Make it yours	7
Add Widgets and more icons to Home Screen	7
Enter Launcher	8
Make a Call	8
Call Log	8
Reject a Call by Sending a Busy Message	8
Add a Contact	9
Send and Receive Message(s)	9
Browse the Web	10
Enjoy Music	10
Download Applications From Android Market	10
Manage Applications/ Move to SD card	10
System Settings	10
Personal	12
Maintenance & Safety	13

## Get Started

### Insert SIM card

The phone is a Dual SIM mobile phone allowing you to use the facility of two networks.

- 1 Switch off the mobile phone.
- 2 Insert the SIM card correctly in the card slot(s)  
(See figure below)

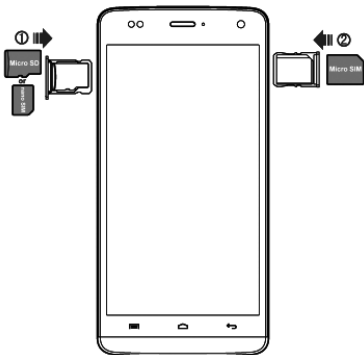

**Note:** The card slot on the left side is allowed to insert NANO card and Micro SD card.


## Charge the Battery or Connect to a Computer

 You can charge your battery using the charger or connect the USB cable (supplied with this phone) to the computer.



## **Keys and Parts**

The smart phone gives you marvelous feelings to experience on Camera, Video recorder, FM radio, Music and Sound recorder. Let you install various APPs, games, and more (supports APK format) by downloading from Android Market.

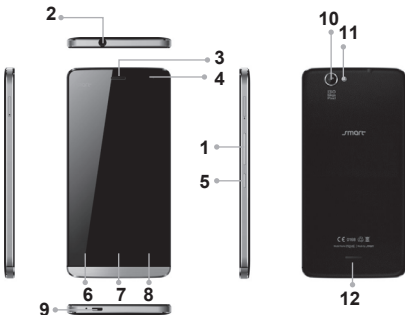

1.Volume Up/Down Key	To adjust the ringer volume, adjust the voice volume during a call and adjust media volume.
2.Headset port	To connect an earphone so you can listen to music or radio, etc.
3.Receiver	To hear the voice of the other side when calling.
4.Front Camera	Allow you to take pictures while facing the screen.
5.Power Key	Switch the phone on or off. Press and hold to open phone options menu.
6.Menu Key	Open a list of options available in the current screen or application.
7.Home Key	Go to home screen; Press and hold to open a window showing you most recently used applications.
8.Back Key	Go back to the previous screen; Close the on-screen keypad, a dialog box, an options menu, or the notification panel.
9.USB jack	To connect charger or USB data cable for data exchange.
10.Back Camera lens	For taking photos.
11.Flashlight	To take photos in low-light conditions.
12.Speaker	To listen to music, and other sounds offered by your phone.

## Lock and Unlock the Screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then drag the lock to the right side to unlock.

Touch an application to open it.

## **Make it yours**

**1) Home screen:** It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features.

**2) Notification Bar:** At the top of the screen, the Status bar displays the time, status, and notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing "Back".

**3) Launcher:** Touch the Launcher icon at the bottom of the screen to view all installed applications.

## **Add Widgets and more icons to Home Screen**

### Add widgets and icons to home screen

Enter Launcher and long press and hold an application till the app displays on the home screen, and then release your finger hold.

### Rearrange or remove widgets and icons on your Home screen

a). Long press and hold the widget or icon you want to move. Once "Remove" appears, don't release your hold on the icon and drag the widget or icon to a new

location on the screen.

b). Press and hold on icon for several seconds, and drag the widgets or icon to remove!

## **Enter Launcher**

### **Open and Switch Applications**


The Launcher holds icons for all of the applications on your phone, including any application that you downloaded from Android Market or other sources. On the Home screen, touch the Launcher Icon to open the main menu.

Slide the Launcher left or right to bring more icons into view.


Touch to open the application

Press Home icon or Back icon to close the Launcher.


### **Switch to Recently Used Application**

Press and hold the  icon for a few seconds.

## **Make a Call**


On the start screen choose  and enter a complete phone number to make a call.

## **Call Log**

Enter Phone interface, tap the icon  in the left corner, and then access to Call log. In call log options, you can Make calls, add new contact and send message etc.

## **Reject a Call by Sending a Busy Message**

While there is an incoming call, you are inconvenient to accept the call, and then you can send a busy message for rejecting the call.

Drag the circle up to , some busy messages will show



on the screen, short tap any of them to send out.

## **Add a Contact**


Tap  and enter Contacts and then add a contact

Tap "" to add a new contact to Phone or SIM card.

## **Send and Receive Message(s)**

Enter Messaging, and then compose new message.

You touch a text field where you want to enter text, to open the keyboard.

Tap "" to select desired contact from phonebook.

Touch the virtual keyboard to capitalize the next letter you type. Touch and hold for caps.

On the keyboard, press space or a punctuation mark to enter the highlighted suggestion.

a. When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in blue.

Touch the text field or portion that contains text. You can select all contexts, copy, cut and paste.

b. When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.

c. On the upper toolbar, use the icons(from right to left order) for cut, copy, past and select all the text.

1. Tap one of the all message thread, you can delete the message thread.

2. Tap a message in a message conversation window.

3. Touch Forward in the menu that opens.

4. Add a contact.

5. Touch Send icon to send the message.

## **Browse the Web**

Switch on Data connection or WiFi

Touch the related icon, to switch on or off Data connection.

**Tips:** To browse the web, you need switch on Data connection.

If there is WiFi around, you can switch on WiFi to use it browse the web. Some may need password.

## **Enjoy Music**

When you copy music to your Micro SD card, the Music player searches the device for music files and builds a catalogue of your music, based on information about each file that is stored in the file itself.

## **Download Applications From Android**

Add a Google account

Enter Android Market (Play Store) and download apps.

## **Manage Applications/ Move to SD card**

Enter Setting >Apps, then manage the applications.

As you install downloaded Apps, you need switch on “Unknown sources” in Security settings.

## **System Settings**

### **Wireless & Network**

You can customize wireless & network settings here, including:

#### **1. Wi-Fi**

Turn on or turn off Wi-Fi here. Set up and manage wireless access point s here.

## **2. Bluetooth**

Turn on or turn off Bluetooth here. Scan for devices and then it will show the scanned devices. Choose a device to pair and then you can send or receive information via Bluetooth.

## **3. Data usage**

## **4. More...**

### **Airplane mode**

### **VPN**

Tap Add VPN and then choose one of the following:

- 1) Add PPTP VPN (Point-to-point Tunneling Protocol)
- 2) Add L2TP VPN (Layer 2 Tunneling Protocol)
- 3) Add L2TP/IPSec PSK VPN (Pre-shared key based L2TP/IPSec VPN)
- 4) Add L2TP/IPSec CRT VPN (Certificate based L2TP/IPSec VPN)

And then set VPN name, VPN server, Enable encryption, DNS search domains to finish it. Press Menu, then tap Save to confirm or tap cancel.

### **Tethering & portable hotspot**

Share your phone's mobile data connection via USB or as a portable Wi-Fi hotspot.

### **Mobile networks**

Set options for roaming, networks, APNs here.

- 1) Data roaming checkbox: Connect or disconnect to data services when roaming.
- 2) Network Mode: Choose preferred network mode from GSM/WCDMA auto, WCDMA only, or GSM only.
- 3) GSM/UMTS Options: Set Access Point Names, Use only 2G networks checkbox, and Network operators here.

## Device

### 1. Audio profiles

#### General

Personalize your call ringtone, notification sounds, Dial pad touch tones, Touch sounds, etc. **Silent**

#### Silent only

#### Meeting

Vibrate only

#### Outdoor

Loudest ring and vibrate

### 2. Display

You can define your wallpaper and set auto rotate screen, brightness, font size, sleep, etc.

### 3. Storage

You can check out the space of your phone or SD card here.

### 4. Battery

You can see the use of the battery.

### 5. Apps

You can manage installed application here.

## **Personal**

### 1. Location access

Access to my location: **ON/OFF**.

#### GPS Satellites

Let apps use GPS to pinpoint your location.

#### Wi-Fi & mobile network location

Let apps use Google location service to estimate your location faster. Anonymous location data will be collected and sent to Google.

### 2. Security

Screen lock  
Owner information  
SIM card lock  
Passwords  
Device administration

### **3. Language & input**

Select language and input method.

### **4. Backup and reset**

Backup my data: Backup app data, Wifi passwords, and other settings to Google servers

Factory data reset: Erases all data on phone.

## **System**

**1. Smart Gesture**

**2. Date & time**

**3. Schedule power on/off**

**4. Accessibility**

**5. About phone**

## **Maintenance & Safety**

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

### **1. After sales service**

Kindly refer to the Guaranty Card provided in the sales package box.

### **2. Charger and Adapter Safety**

Charger and adapter are designed for indoor use only.

### **3. Battery Information and Care**

- Please do not disassemble the rear cover of the mobile phone, since the battery is inbuilt.

- Recharge the battery after long periods of non-use to maximize battery life.
- Battery life will vary due to usage patterns and environmental conditions.
- The self-protection function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, reinsert it, and turn the phone on.

#### **4. General Notice**

- Do not place items containing magnetic components such as a credit card, phone card, bank book, or subway ticket near your phone. The magnetism of the phone may damage the data stored in the magnetic strip.
- Talking on your phone for long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period time, store it in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (i.e. TV or Radio) may cause interference to the phone.
- Do not immerse your phone in water. If this happens, remove the battery and take it to an Authorized Service Center.
- Do not paint your phone.
- The data saved in your phone might be deleted due to careless use, repair of the phone, or upgrade of the software. Please backup your important phone numbers. (Ring tones, text messages, voice messages, picture, and videos could also be deleted.) The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when the phone is close to your ear.

- The suitable temperature for the phone and accessories is  $-10^{\circ}\text{C}\sim 45^{\circ}\text{C}$ .
- When charging, please place the phone in an environment that has a normal room temperature and good ventilation. It is recommended to charge the phone in an environment with a temperature under  $40^{\circ}\text{C}$ . Please ensure to use only the charger offered by the manufacturer. Using unauthorized charger may cause danger and violate the authorization of the phone and the guarantee article.
- Dispose of used batteries according to the instructions.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

**Warning:** Company will not bear any responsibility for any incompliance with the above guidelines or improper use of the mobile phone. Our company keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the device. In such case, the latter shall govern.



[www.smartgsmphone.com](http://www.smartgsmphone.com)